



## Babel Buster 2 Model BB2-6040 Quick Start Guide

1. Connect power. Apply +12 to +24VDC or 24VAC to the terminal marked “POWER”, and common or ground the the terminal marked “GND”.

2. Connect a CAT5 cable between the RJ-45 jack on the top and your network switch or hub. You cannot connect directly to your PC unless you use a “crossover” cable.

3. The default IP address as shipped is 10.0.0.101. If your PC is not already on the 10.0.0.0 domain, you will need to add a route on your PC. Do this by opening a command prompt. First type “ipconfig” and note the IP address listed. This is your PC’s IP address. Now type the command

```
route add 10.0.0.0 mask 255.255.255.0 1.2.3.4
```

but substitute your PC’s IP address for 1.2.3.4.

This generally works on Windows. If this fails, you will need to temporarily change your computer’s IP address to a fixed address that starts with 10.0.0. and ends with anything but 101.

4. Open your browser, and enter “http://10.0.0.101/” in the address window. You should see a page with the “Babel Buster BB2-6040” header shown above. From this point, you will find help on each page in the web site contained within the product. You can change the IP address on the System -> Setup -> Network page.


5. The default login is user name “system” with password “admin”. You can also log in as “root” using password “buster”.

**6. Be sure to save any configuration changes you made on the System -> Setup -> Config File page. They will be lost upon power cycle if not saved here.**



NOTE: If the yellow Link LED is not on, check your cable connections. It should be on any time power is applied and an Ethernet connection is present.

The server takes 1-2 minutes to boot up after power is applied. Your browser will not connect until fully booted up.

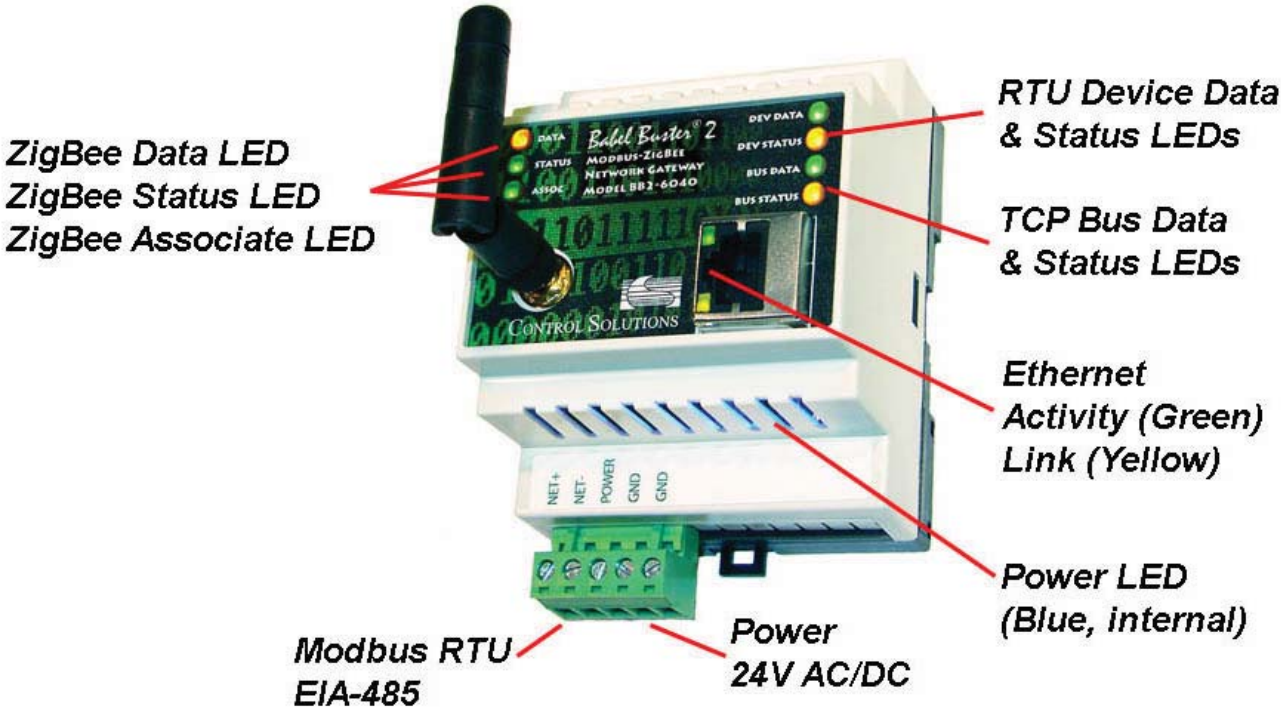

Note: Additional information may be found on the BB2-6040 product page at [www.csimn.com](http://www.csimn.com), including Flash videos, User Guide, and links to information you will need in order to configure ZigBee devices to work with your BB2-6040 gateway.