



User Guide

Models VP4-0610, VP4-2310
and VP4-2810

ValuPoint 4
Programmable I/O
for Modbus RTU

Rev. 1.1 – June 2016

ValuPoint for Modbus User Guide Contents

[1 Overview](#)

- 1.1 How to Use This Guide
- 1.2 Important Safety Notice
- 1.3 Overview of the ValuPoint Devices
- 1.4 Warranty
- 1.5 Required License Information

[2 Installation and Connections](#)

- 2.1 Installing the configuration software
- 2.2 Serial Port Connection
- 2.3 Indicators on the VP4-0610 Programmable I/O
- 2.4 Indicators on the VP4-2310 Programmable I/O
- 2.5 Indicators on the VP4-2810 Programmable I/O

[3 Connect](#)

- 3.0 Do This for First Time Startup
- 3.1 Connect to Target Running as Slave
- 3.2 Connect to Target Running as Master

[4 Read/Write](#)

- 4.0 Do This for First Time Startup
- 4.1 Read Registers
- 4.2 Write Registers
- 4.3 Errors

[5 Object Map Page](#)

- 5.0 Do This for First Time Startup
- 5.1 Common Parameters
- 5.2 Physical Hardware I/O Parameters
- 5.3 Modbus RTU Master Parameters
- 5.4 Insert, Add, Delete
- 5.5 Read/Write Device
- 5.6 File Read/Write (Object Map XML)

[6 Object Map List](#)

- 6.0 Do This for First Time Startup
- 6.1 Read All, Write All
- 6.2 Select for Edit
- 6.3 File Read/Write (Object Map CSV)

[7 Data List](#)

- 7.0 Skip This for First Time Startup
- 7.1 Read All
- 7.2 Data Definitions

[8 Modbus Page](#)

- 8.0 Do This for First Time Startup
- 8.1 Set Modbus Port Parameters
- 8.2 Check/Reset Errors

[9 PL/i Programming for Control](#)

- 9.0 Skip This for First Time Startup
- 9.1 Program Loading and Execution

- 9.2 Program Editing and Debugging
- 9.3 Program Capacity
- 9.4 Program States and Error Codes

[10 Diagnostic Log](#)

- 10.0 Skip This for First Time Startup
- 10.1 Using the Diagnostic Log

[11 Modbus Register Map](#)

- 11.1 Modbus Registers - Full Map
- 11.2 Modbus Registers - Real Time Clock Access

[12 Physical I/O Connections](#)

- 12.1 Connection of Inputs
- 12.2 Connection of Outputs
- 12.3 Connection of Power and Communications, VP4-0610
- 12.4 Connection of Power and Communications, VP4-2310
- 12.5 Connection of Power and Communications, VP4-2810

[13 Trouble Shooting](#)

- 13.1 Modbus Trouble Shooting
- 13.2 Modbus Exception (error) Codes
- 13.3 LED Indicators in ValuPoint
- 13.4 System Fault Indications

[14 Editing a CSV Object Map File](#)